



For Android

# How to activate an eSIM on your phone

**Method 1**

**QR Code Setup**

..... page 2

**Method 2**

**Manual Setup**


..... page 8

\*The screen display can differ based on the device and OS version.


**eSIM**  
**Global Mobile**

# QR Code Setup

# Android - QR Code Setup

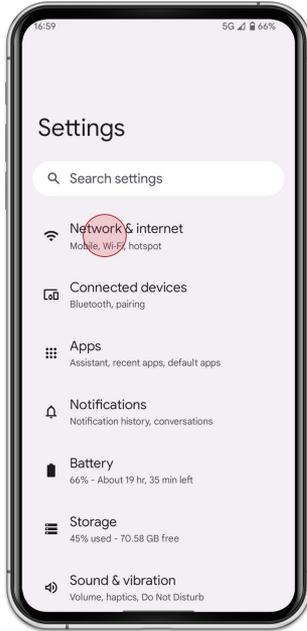


1. Go to [**Settings**] and tap [**Network & internet**]

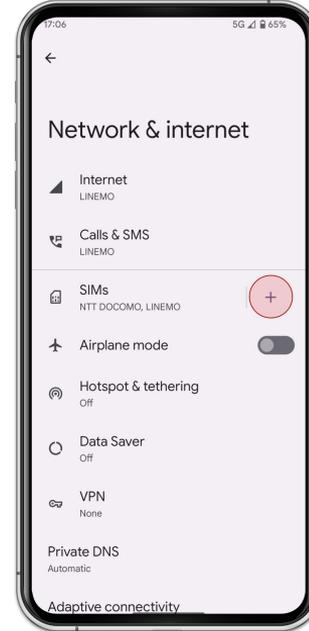


2. Tap [**SIMs**]

## Android - QR Code Setup

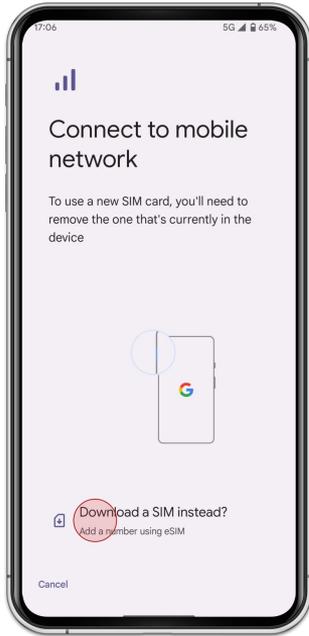


3. Tap [**Download a SIM instead?**]

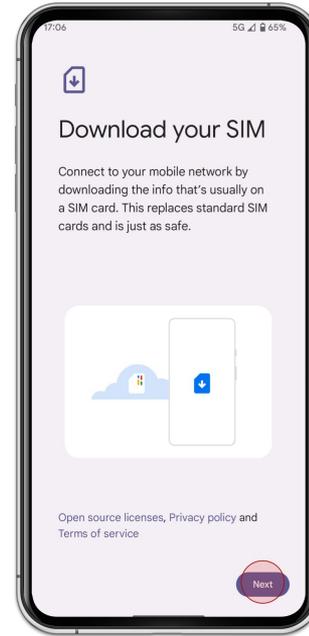

4. Tap [**Next**]

## Android - QR Code Setup

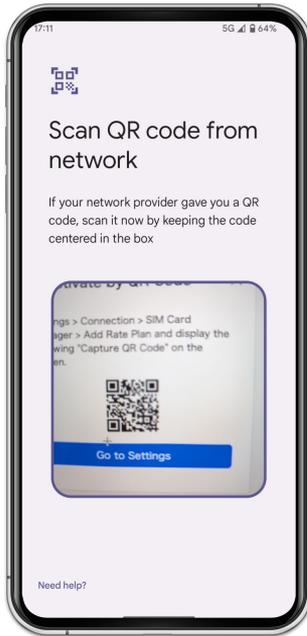


5. Scan your QR Code of your order




6. Tap [**Download**]

## Android - QR Code Setup

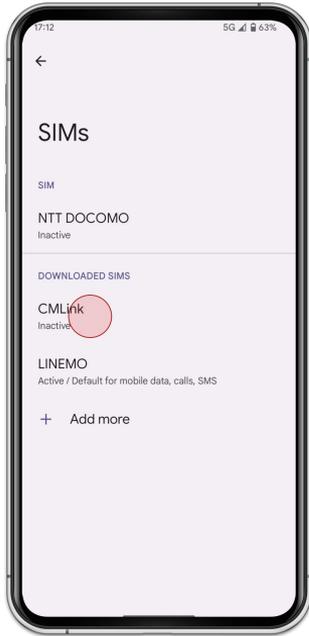


7. Select the eSIM you added

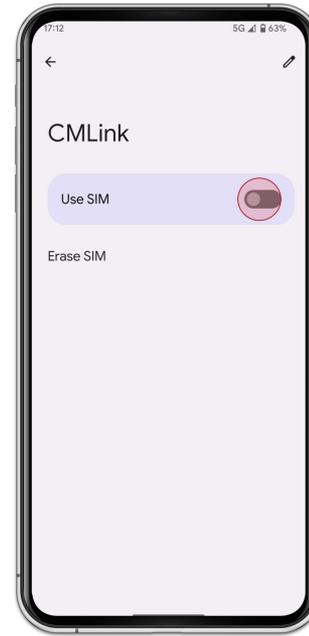


8. Turn on [**Use SIM**]

## Android - QR Code Setup

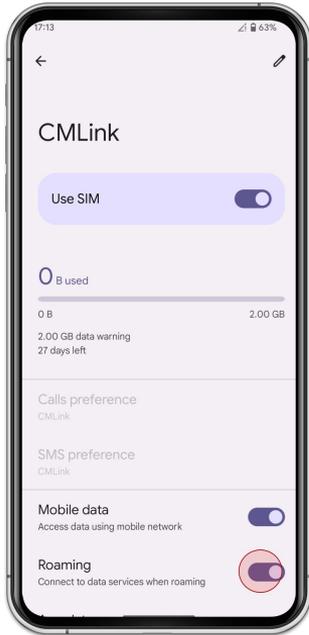


9. Turn on [**Roaming**]

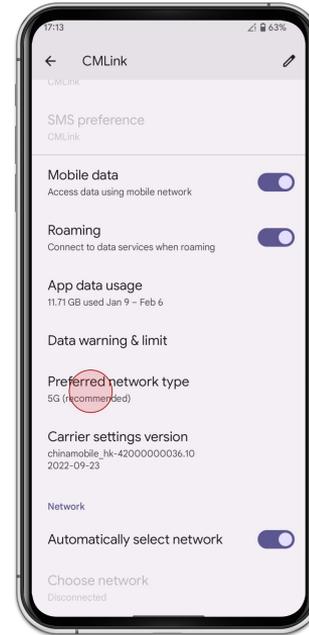


10. Tap [**Preferred network type**] and select [**LTE**]

# Manual Setup (SM-DP+)

# Android - Manual Setup

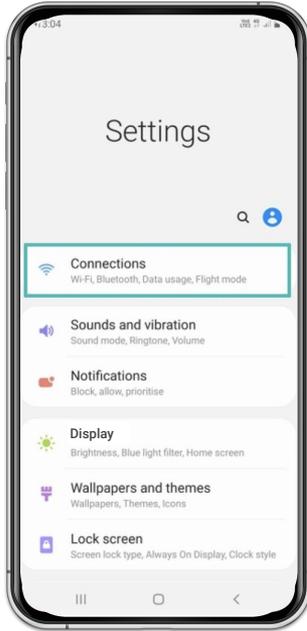


1. Go to [**Settings**] and tap [**Connections**]

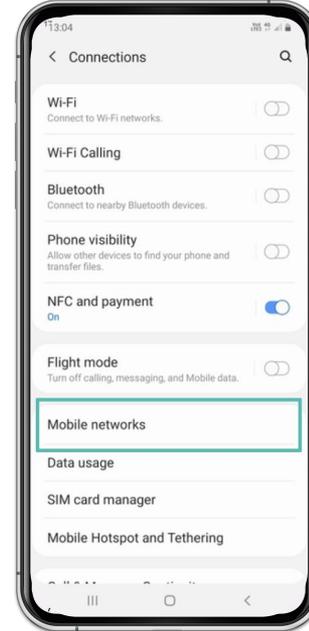


2. Tap [**Mobile networks**]

## Android - Manual Setup

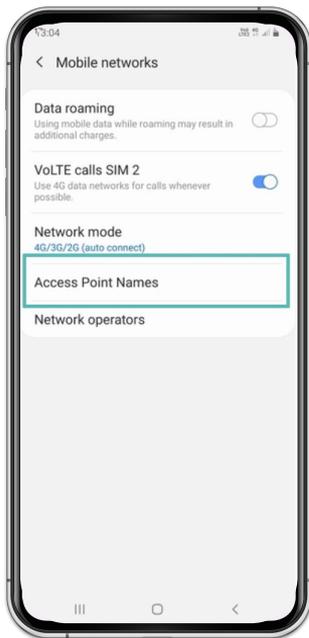


3. Tap [Access Point Names]

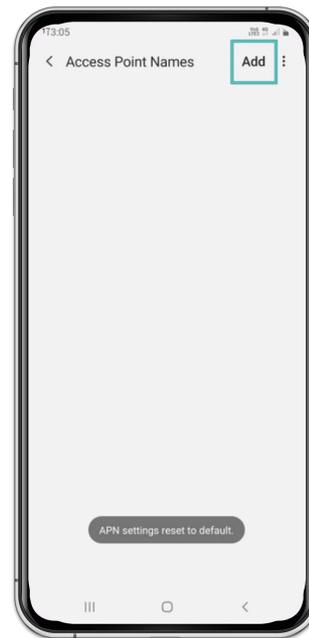


4. Tap [Add]

## Android - Manual Setup

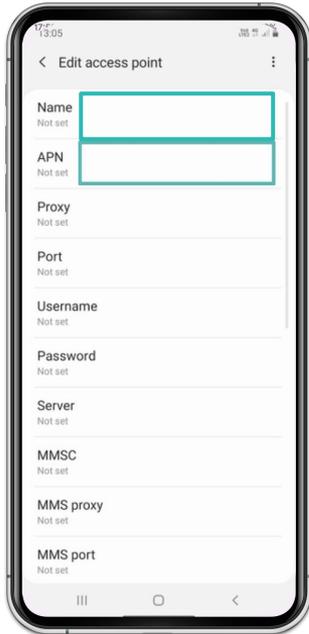


5. Enter [[m-air.jp](#)] for Name & APN (Japan)  
Enter [[cmlink](#)] for Name & APN (Others)

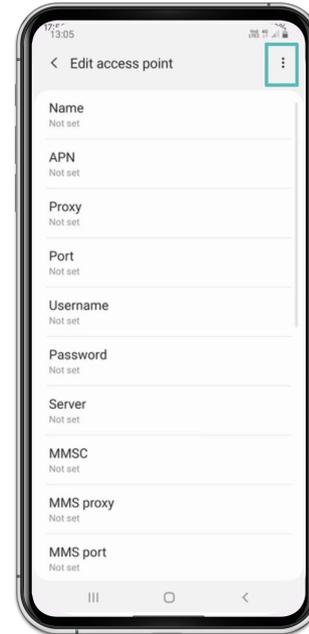

6. Tap [[top right icon](#)]

## Android - Manual Setup

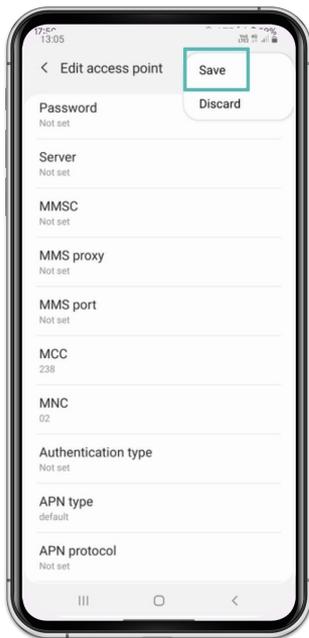

7. Tap [Save]



8. Select [m-air.jp]

## Note at end

If the connectivity does not work properly even after correct setting, please reboot your device.